


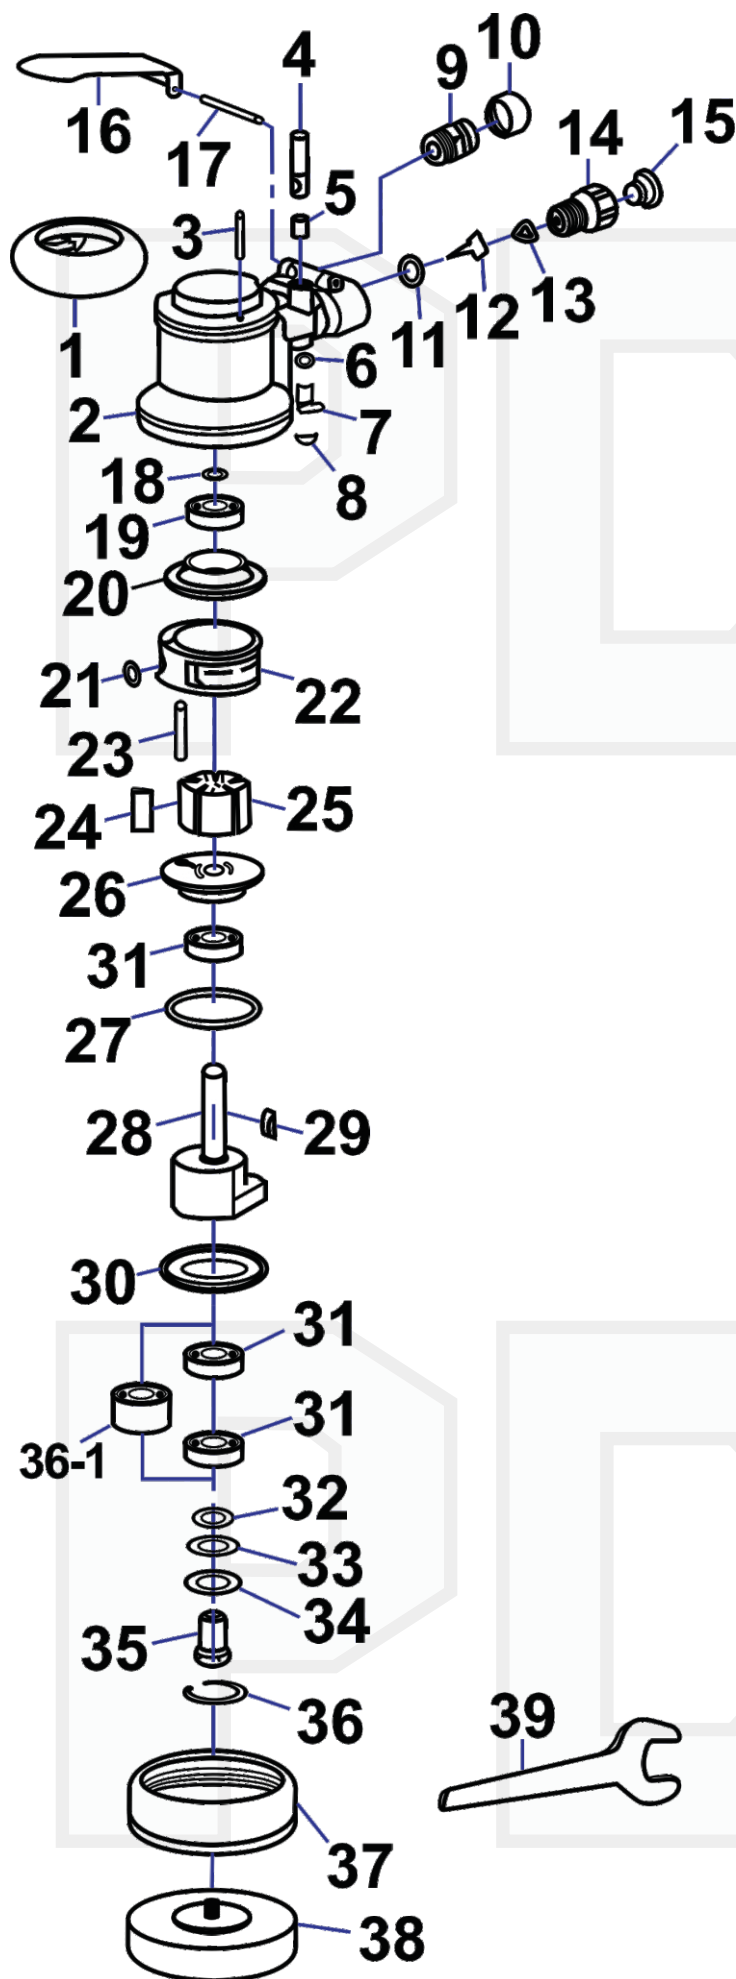

CÓDIGO	DESCRIÇÃO	QTD
406-01	Capa da Carcaça	1
406-02	Carcaça	1
406-03	Pino	1
406-04	Válvula	1
406-05	Bucha	1
406-06	O-Ring	1
406-07	Regulador	1
406-08	Anel Trava	1
406-09	Adaptador do Escape	1
406-10	Silenciador	1
406-11	Assento	1
406-12	Válvula	1
406-13	Mola	1
406-14	Entrada de Ar	1
406-15	Tampa Plástica	1
406-16	Gatilho	1
406-17	Pino	1
406-18	Anel Trava	1
406-19	Rolamento	1
406-20	Flange Traseira	1
406-21	O-Ring	1
406-22	Camisa	1
406-23	Pino Mola	1
406-24	Palheta	1
406-25	Rotor	5
406-26	Flange Dianteira	1
406-27	O-Ring	1
403-28	Eixo	1
406-29	Chaveta	1
406-30	Porca de Travamento	1
406-31	Rolamento	1
406-32	Gaxeta Pequena	3
406-33	Gaxeta Grande	1
406-34	Arruela	1
406-35	Parafuso do Contrapeso	1
406-36	Anel Trava	1
403-37	Capa de Vácuo	1
406-39	Chave de Boca	1